


Quick Start

Ballroom AV Rack

Using the Ballroom AV rack consists of: 1) The sound system, 2) lowering the projector using the projector lift, and 3) routing a source to the projector using the AV rack controls.

To POWER ON the AV Rack:

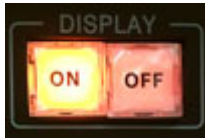

Push the Display "ON" button to power on system. The following automatically occurs:

1. The projection screen lowers.
2. The projector powers on.

NOTE: Raising/lowering the projection screen may also be achieved by using the three button wall switch to the left of the AV rack.

Adjusting Volume:



MLC 226 Volume – Use this as the master volume for the AV rack.



IN1608 Volume – This volume should be set to approximately 80-90% (shown). Do not use this volume knob unless necessary for some reason. This volume knob allows adjusting volume sources sent to the dual auxiliary RCA outputs for use with the Wireless Video Rack.



AVT 200HD Volume – Disabled. No function.

AV Mute & Channel Selection:



Pressing the "AV MUTE" button will cause the button to flash red. Pressing the "AV MUTE" button causes the following:

1. Mutes all video coming out of the projector (nothing will be shown on the screen).
2. Mutes all audio coming from the sound system (no audio will be heard from the sound system).

Channel selection

1. Use the Up/Down arrow buttons on the MLC 226 to select channels, or
2. Use the Up/Down arrow buttons on the AVT 200HD to select channels.

Quick Start

Ballroom AV Rack

To POWER OFF the AV Rack:



Push and hold the Display “OFF” button to power off the system. The following automatically occurs:

1. The Display OFF button flashes.
2. The projection screen raises.
3. The projector powers off.

NOTE: Raising/lowering the projection screen may also be achieved by using the three button wall switch to the left of the AV rack.

Troubleshooting

Volume / No sound

1. Is the sound system powered on and routed correctly? Sound from the AV rack is hard wired into the Ballroom 1 sound system.
2. Is the volume level of the IN1608 set to 80-90%?
3. Is the volume level of the MLC 226 turned up?
4. Is the correct video source selected?
5. Is the AV MUTE engaged? Button will be flashing red.

Video / No image showing

1. Is the system powered on?
2. Is the correct video source selected
3. Is the AV MUTE engaged? Button will be flashing red.
4. Projector (less likely to be the cause)
 1. Is the projector powered on?
 2. Check that the power cable on the projector lift is connected to the surge protector, and that the projector is connected to the surge protector.
 3. Projector must be set to its HDMI input. This should never be changed.